HAGER COMPANIES

CONTENTS

1.	TRACK (9601)	1
2.	CARRIER (9605)	2
3.	QUICK RELEASE PLATE (9610)	2
4.	DOOR GUIDE SET (9883)	1
5.	BUMPER KIT (9881)	1
6.	PULL	1
	(Sold Separately)	
7.	#8 X 3/4" PPHS	1
8.	#8 X 1" PPHS	16
9.	#8 X 5/8" TPHS	2
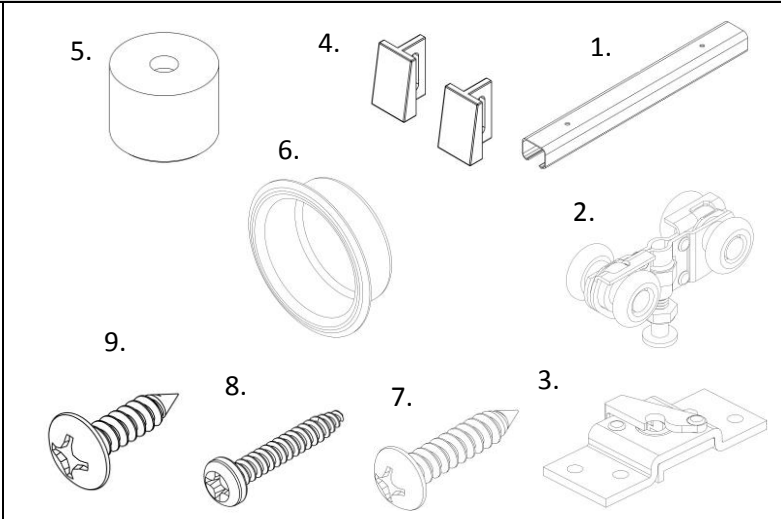
1 PREPARE OPENING

OPENING HEIGHT MAX = DOOR HEIGHT + 3-1/2"
OPENING HEIGHT MIN = DOOR HEIGHT + 2-1/4"

POCKET

ROUGH OPENING
2 X DOOR WIDTH+ 1" [25.4]

1 3/8"
[35.6]

1-1/16"
[27]

1-7/8" ±1/8"
[47.6±3.2]

DOOR
HEIGHT

OPENING
HEIGHT

1/2"
[12.7]

FROM BOTTOM OF DOOR
TO TOP OF FINISHED FLOOR
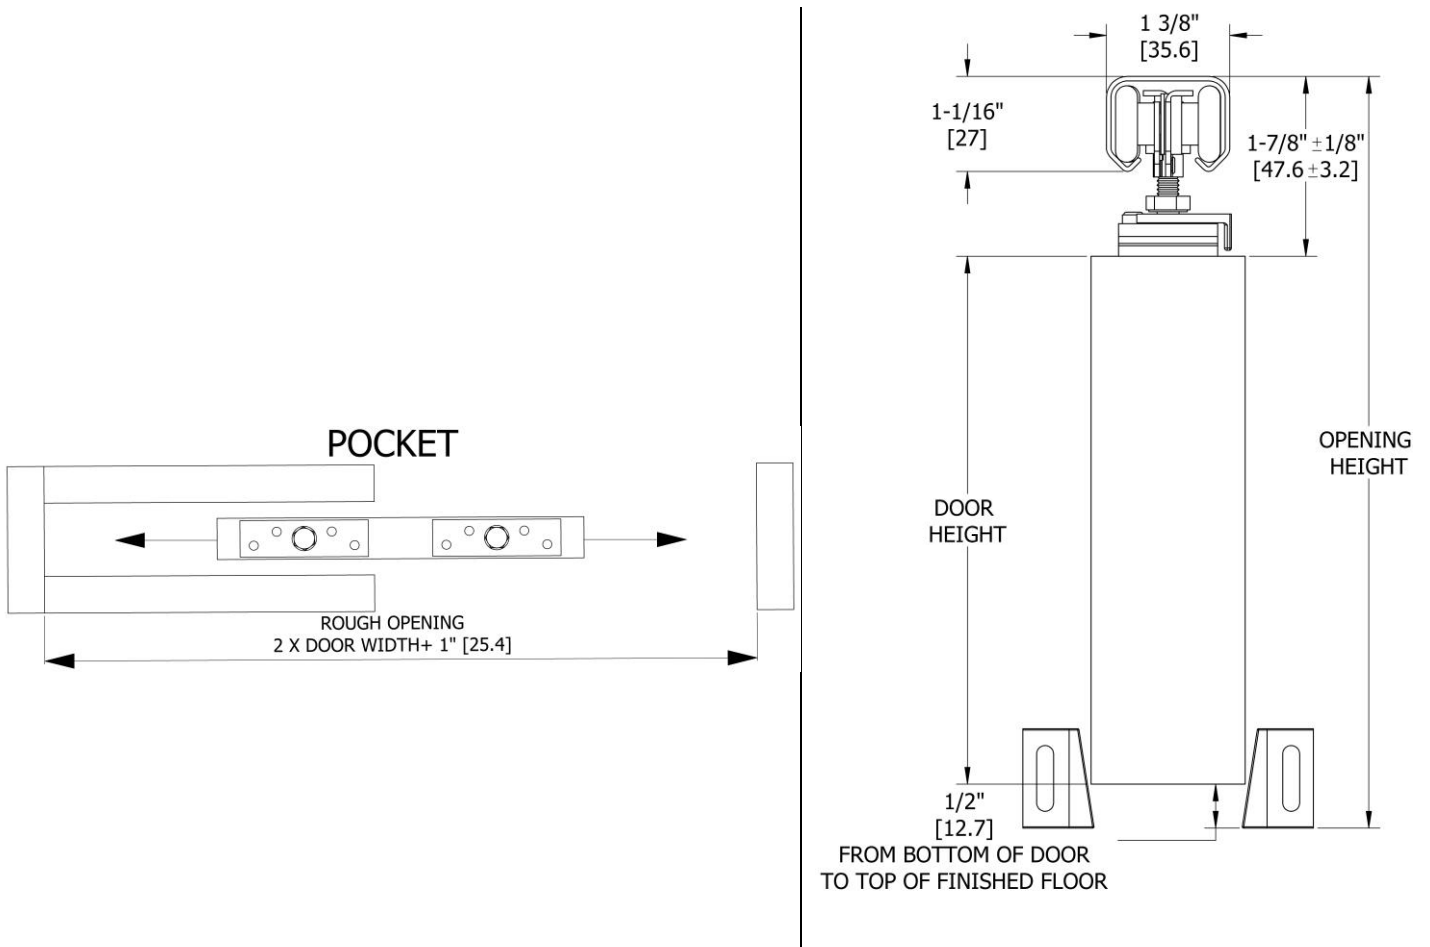
2 INSTALL TRACK AND HARDWARE

- Center track in opening, Secure with (#8 X 1") screws
- Leave a 1" gap between opening end of track and door frame
- Center quick release plates on door thickness
- Mount pocket plate edge 1" from near pocket door edge
- Mount opening plate edge 2-3/4" from near opening door edge
- Secure carriers onto door with (#8 X 1") screws
- Secure bumper centered on inside edge of door

1.00 [25.4]

Pocket end

Opening end

2.75" [69.8]
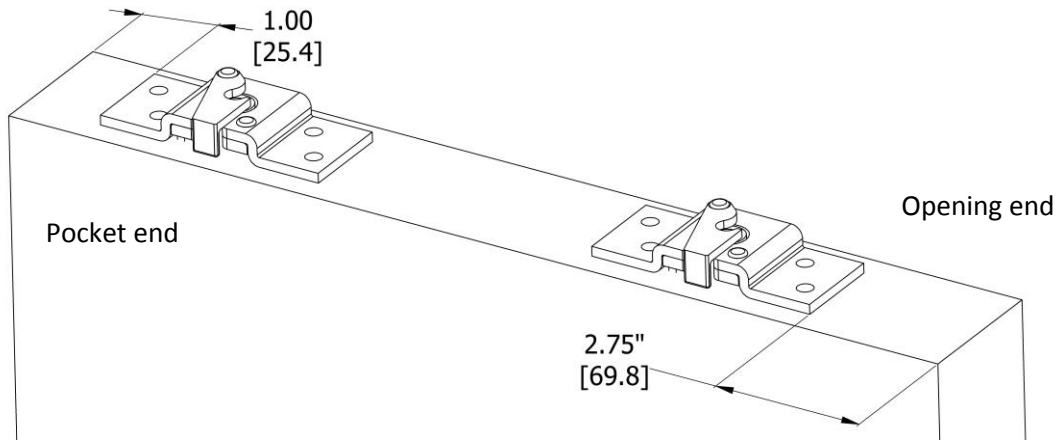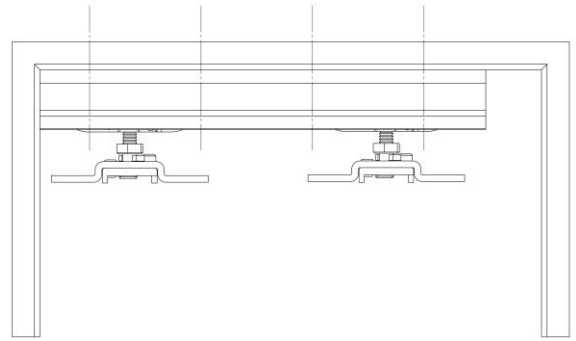
3 HANG DOORS

- Open quick release latches on brackets and slide door onto carriers and close latches.

CENTERED
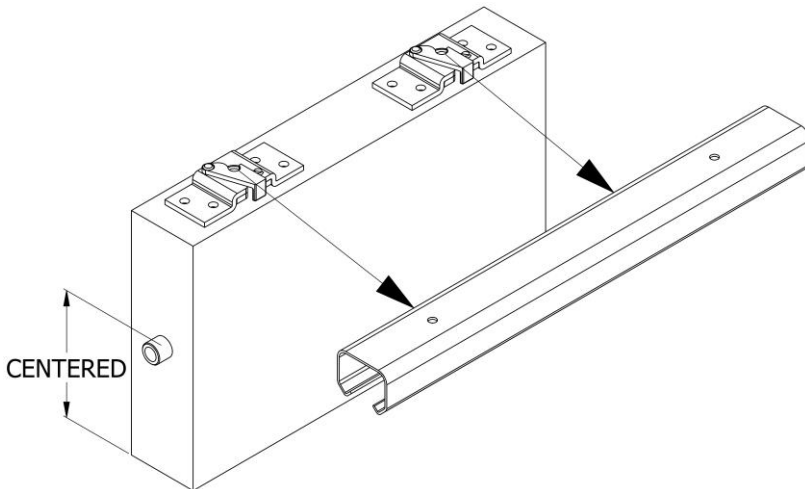
4 ADJUST AND FINISH

- Adjust carriers so door is square with frame
- Drill proportional sized hole to install pull (OPTIONAL)
- Install door guides outside of finished trim at base of door.

ADJUSTING BOLT

2" [50.8]

36" [914]

DOOR GUIDES