



1 Description

The 6" Square push plates come in three styles: one with a handicap logo, one that states "Push To Operate", or one with Plain face. They are available in Stainless Steel or Brass.

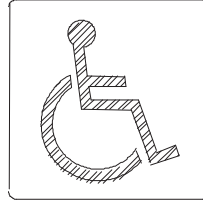

	WHEELCHAIR LOGO	PUSH TO OPEN / LOGO
Stainless Steel	2-659-0170	2-659-0169



2 Wiring

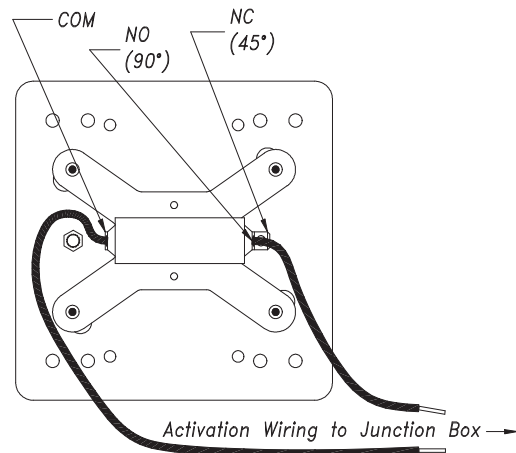


3 Installation

If necessary, use the following illustrations as a guide to adjust the face of a push plate 90 degrees for final installation of the plate.

TO ROTATE PLATE 90°
MOVE FOUR STUDS TO THE
OTHER FOUR THREADED
HOLES IN THE BACKPLATE

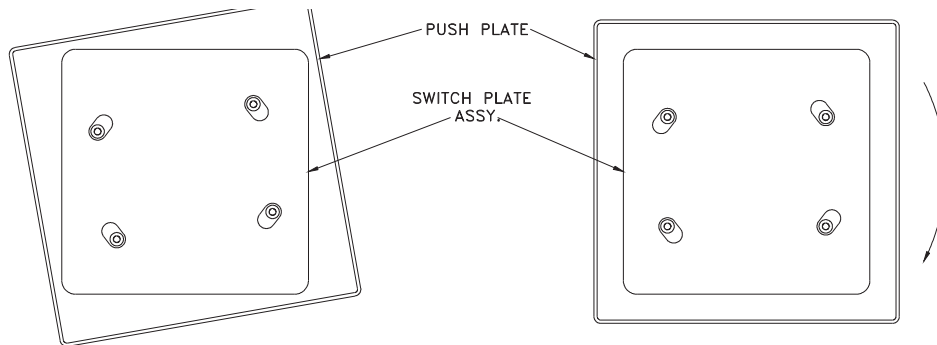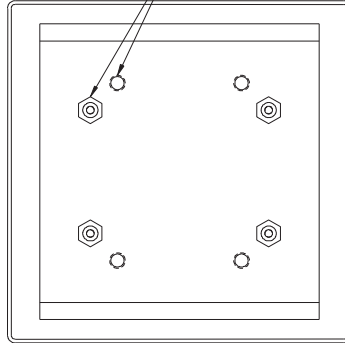

TO INSTALL PUSH PLATE
1. LOCATE STUDS AS SHOWN.
2. PRESS IN & ROTATE PLATE.
3. RELEASE, MAKE SURE STUDS LOCK INTO SPRING.

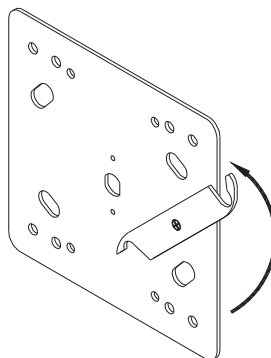


ROTATE LOCK BAR
ONTO STUD

4 Technical Specifications

Dimensions	6" x 6" x 1.5" Square
Faceplate Material	Stainless Steel or Brass
Switch Rating	SPST, 15A 125 or 250 VAC

5 Accessories (Sold Separately)

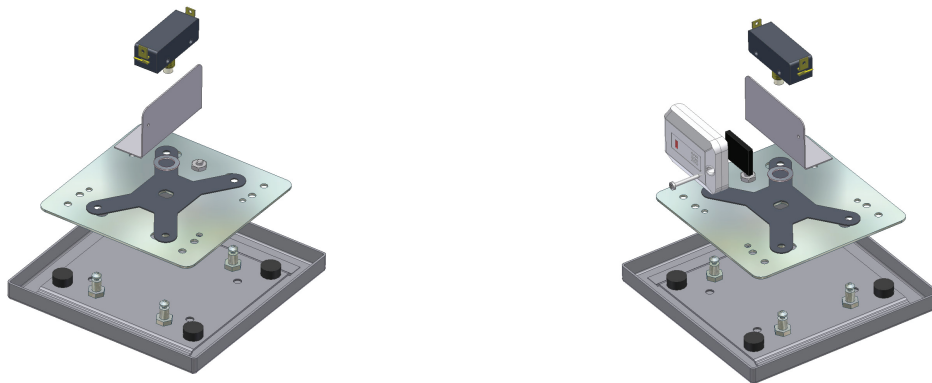

Remote control transmitters can be purchased for use if hard-wiring is not possible. It can be easily attached using the Velcro and screw provided with the kit.